

Conventional One Piece Bow Stop/Winch Stand

Once you correctly load your boat onto the trailer (transom flush with bunking), just attach the bow stop/winch stand so that the roller is just above the boat's bow-eye. The winch strap goes under the roller to the boat's bow-eye. Make sure the winch strap is level with or slightly higher than the bow-eye.

